



## S8-MR...M

Background suppression



## S8-MR...B

Polarised retroreflex



## S8-MR...C

Diffuse proximity



## S8-MR...F/G

Receiver/Emitter

## INSTRUCTION MANUAL

### CONTROLS

#### OUTPUT LED (yellow) (S8...B/C/M/F)

The yellow LED ON indicates the output status.

#### POWER ON LED (green)

The green LED ON indicates the powering status and the laser emission presence.

#### DISTANCE ADJUSTMENT TRIMMER (ADJ.) (S8...M)

The multiturn trimmer with clutch (8 turns) adjusts the suppression distance through the mechanical variation of the optic triangulation angle. The operating distance increases rotating the trimmer in a clockwise direction. Please refer to "SETTING" paragraph for the correct use procedure.

#### SENSITIVITY TRIMMER (ADJ.) (S8..B/C/F)

The sensitivity and operating distance can be adjusted using this trimmer. See the "SETTING" paragraph for procedure indications.

#### LIGHT/DARK TRIMMER

The light/dark mode is selected using a mono-turn trimmer. Please refer to "SETTING" paragraph for the correct use procedure.

**WARNING:** the maximum mechanical rotation range of the trimmer is 240°. Do not force over of the maximum and minimum positions.

### INSTALLATION

The sensor can be positioned by means of the two housing holes using two screws (M3x18 or longer, 0.8Nm maximum tightening torque) with washers.




Various orientable fixing brackets to ease the sensor positioning are available (please refer to the accessories listed in the general catalogue).

The operating distance is measured from the front surface of the sensor optics.



### CONNECTIONS

#### M8 Connector

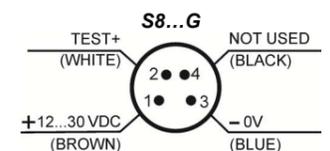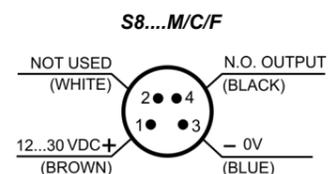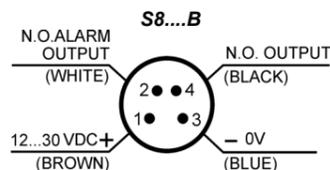

### TECHNICAL DATA

	S8...M	S8...B	S8...C	S8...F	S8...G
Power supply:	12 ... 30 VDC				
Ripple:	2 Vpp max.				
Consumption (output current excluded):	35 mA max	30 mA max	20 mA max	20 mA max	15 mA max
Outputs / Alarm output (only B):	PNP or NPN N.O.; 30 Vdc max. (short-circuit protection)				
Output current:	100 mA (overload protection)				
Output saturation voltage:	≤ 2 V				
Response time:	1ms	500 us			-
Switching frequency:	500Hz	1KHz			-
Emission type:	RED (660 nm)				
Operating distance (typical values):	50..300mm	5m on R2, 7m on R5 (EG2)	50cm on 90% white target (EG2)	25m (30m max)	
Regulations	8-turn distance adjustment trimmer	Mono-turn sensitivity adjustment trimmer			-
LIGHT/DARK selection:	Monoturn trimmer				
Indicators:	OUTPUT LED (yellow) / POWER ON LED (green)			POWER ON LED (green)	
Operating temperature:	-10 ... 55 °C				
Storage temperature:	-20 ... 70 °C				
Dielectric strength:	1500 Vac 1 min. between electronics and housing				
Insulating resistance:	>20 MΩ 500 Vdc between electronics and housing				
Ambient light rejection:	according to EN 60947-5-2				
AtEx 2014/34/EU:	II 3G EX nA II T6 ; II 3D EX tD A22 IP67 T85°C				
Vibrations:	0.5 mm amplitude, 10 ... 55 Hz frequency, for each axis (EN60068-2-6)				
Shock resistance:	11 ms (30 G) 6 shocks for each axis (EN60068-2-27)				
Housing material:	INOX AISI 316L				
Lens material:	Window in glass; lens in PC				
Mechanical protection:	IP67; IP69K (TYPE 1 ENCLOSURE)				
Connections:	M8 4-pole connector				
Weight:	70 g. max.				

### SETTINGS

#### DARK/LIGHT SETTING

Rotate trimmer in an anti-clockwise direction to set the LIGHT mode (output ON with the reflector).

Rotate trimmer in a clockwise direction to set the DARK mode (output ON in presence of the object).



#### SUPPRESSION DISTANCE SETTING (S8...M)


##### 1. Object detection (Light mode)

Position object to detect in front of the sensor at the distance required.

Turn distance adjustment trimmer (ADJ) to minimum: yellow LED OFF.

Rotate trimmer in a clockwise direction until the yellow LED turns ON.

Object detection condition (pos.A).

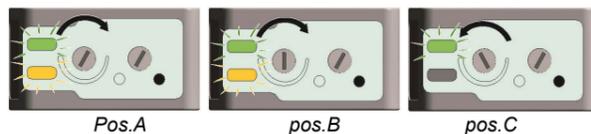

##### 2. Background suppression

Remove object and ensure that the background is in front of the sensor: yellow LED OFF.

Rotate trimmer in a clockwise direction until the yellow LED turns ON: background detection condition (pos.B).

The trimmer reaches maximum level with yellow LED OFF if the background is outside the operating range.

Rotate trimmer in an anticlockwise direction until yellow LED turns OFF: condition where background is outside operating range (pos.C).

##### 3. Setting and control

Rotate trimmer in an anti-clockwise direction until the trimmer reaches an intermediate point between position A and C.

If position A and C are close to each other, leave trimmer on position C.

The sensor is now ready to function correctly and in stable conditions.



#### SENSITIVITY SETTING (S8...B)

##### Alignment:

- Position and align the sensor and reflector on opposite side at the desired distance.

- Rotate sensitivity adjustment trimmer (ADJ.) to maximum point (clockwise direction).



- Move the sensor vertically and horizontally to determine the powering on and powering off points of the yellow LED (OUT) and fix the sensor in the middle of these two points.

- To detect very small objects, reduce the sensitivity using the specific trimmer (if necessary). Repeat procedure reducing progressively the sensitivity to improve alignment.

##### Control:

- Enter object laterally in the detection area and check that the yellow LED turns ON (in dark mode).

- remove object and check that the yellow LED turns OFF immediately (in dark mode).

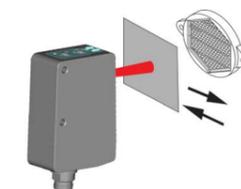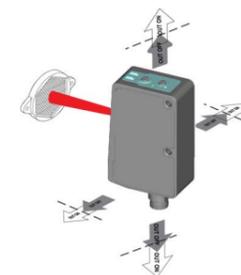

#### SETTINGS (S8...C)

Turn the sensitivity trimmer to minimum: the yellow LED is OFF (light mode). Position the target to detect in front of the sensor.

Turn the sensitivity trimmer clockwise until the yellow LED turns ON (Target detected state, pos.A).

Remove the target, the yellow LED turns OFF.

Turn the sensitivity trimmer clockwise until the yellow LED turns ON (Background detected state, pos.B).

The trimmer reaches maximum if the background is not detected.


Turn the trimmer to the intermediate position C, between the two positions A and B.



#### SETTINGS (S8...F/G)

Position the sensors on opposite sides. Turn the sensitivity trimmer to maximum. Find the points where the yellow LED (OUT) is switched ON and OFF in both vertical and horizontal positions, and fix the sensor in the centre between these points. If necessary, reduce sensitivity using the trimmer, in order to detect very small targets. In order to improve alignment, repeat the procedure detailed above whilst progressively reducing the sensitivity.

### DIMENSIONS

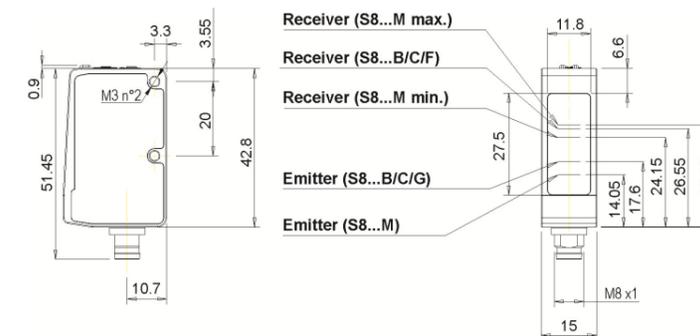

#### Sensitivity Trimmer (S8...B/C/F)

#### Distance Adj. Trimmer (S8...M)

#### Trimmer DARK/LIGHT (S8...B/C/M/F)

#### S8...B/C/M/F

#### S8...G

### PERFORMANCES (S8..B)


#### TAB.1: Operative distance

##### REFLECTOR

R2	R5	RT3970 (60x40mm)
5 m	7 m	2 m

On RT3970 the sensor performances are strongly influenced by the dimensions used.

### DETECTION DIAGRAM (S8...M)

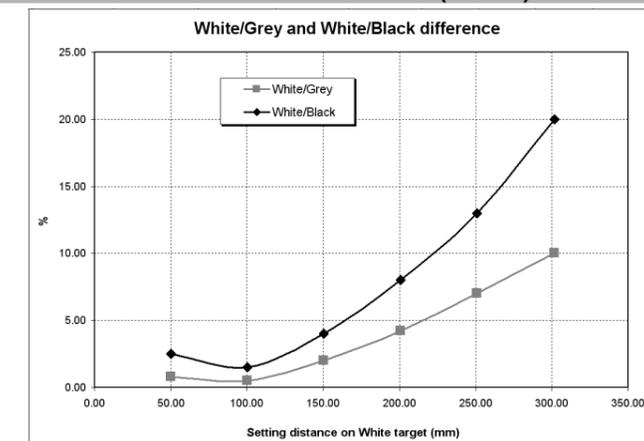

### DIAGNOSTIC FUNCTIONS (S8...G)

#### TEST+ input

The TEST+ input can be used to inhibit the emitter and verify that the system is correctly operating. The TEST function is activated if the TEST+ input is connected to a voltage between 12...30V, whereas if the TEST+ input is connected to GND or it is not connected the function is deactivated.

The sensors are NOT safety devices, and so MUST NOT be used in the safety control of the machines where installed.

#### Datalogic S.r.l.

Via S. Vitalino 13 - 40012 Calderara di Reno - Italy  
Tel: +39 051 3147011 - Fax: +39 051 3147205 - www.datalogic.com

Helpful links at www.datalogic.com: [Contact Us](#), [Terms and Conditions](#), [Support](#).

The warranty period for this product is 36 months. See General Terms and Conditions of Sales for further details.

Under current Italian and European laws, Datalogic is not obliged to take care of product disposal at the end of its life. Datalogic recommends disposing of the product in compliance with local laws or contacting authorised waste collection centres.

© 2012 - 2017 Datalogic S.p.A. and/or its affiliates • ALL RIGHTS RESERVED. • Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. All other trademarks and brands are property of their respective owners. Datalogic reserves the right to make modifications and improvements without prior notification.